
## **HARDWARE**

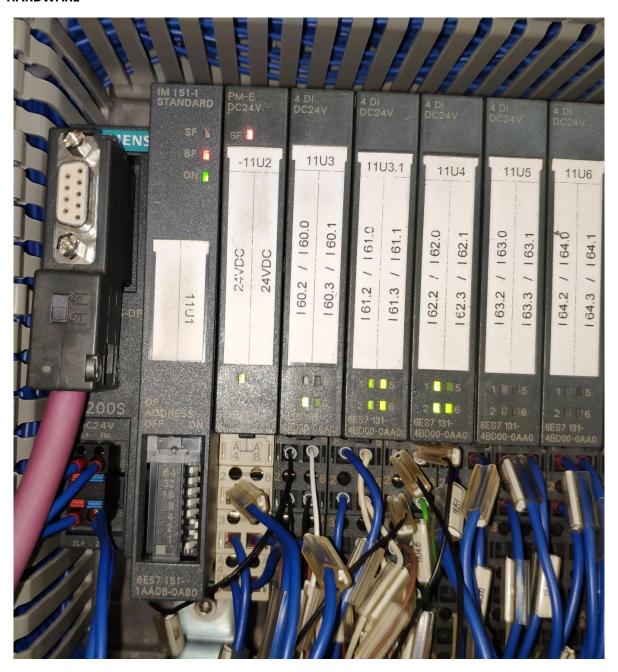

IM151-1:

BF Led fix while loading. Blinking when PC load up.

PM-E:

SF Led always fix

Adresse: 3

24V supply OK

## **SOFTWARE**

